


[Home](#)  
[Back to UVhat page](#)

**UV Hat**  
**Brim**  
interfacing(heavy weight)  
**one sheets**

Bonding line AA

Bonding line Aa

Bonding line AA

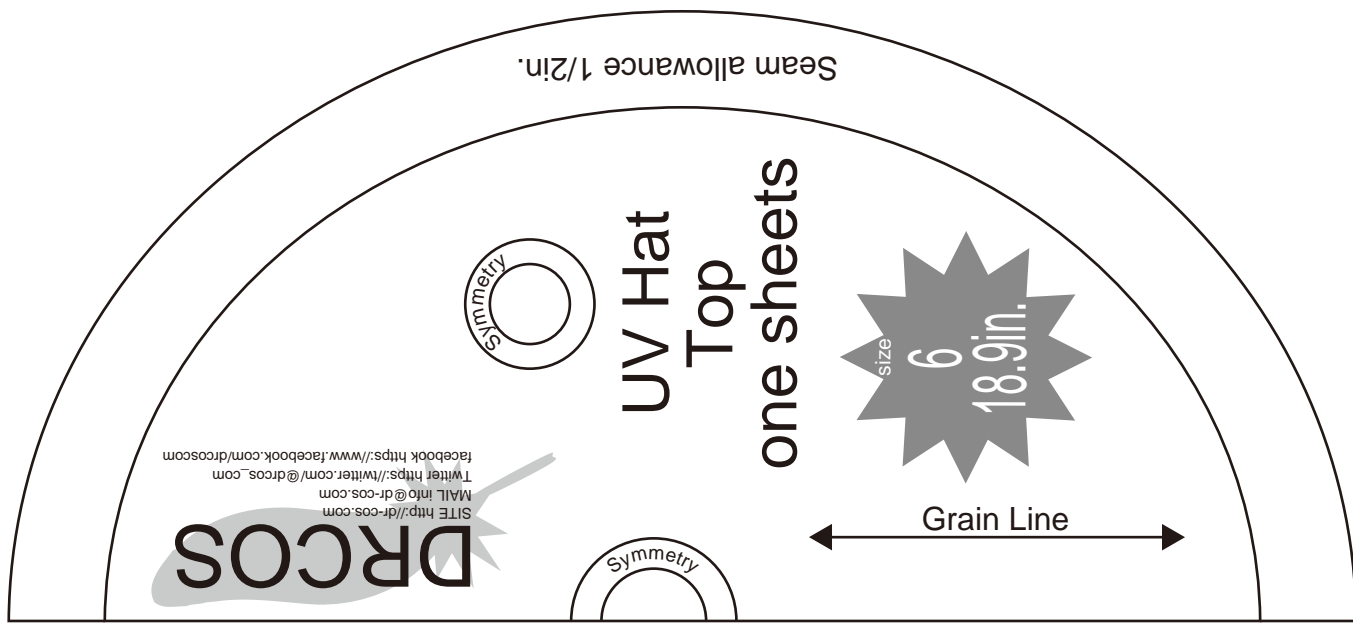

Bonding line Ba

Bonding line AB

Bonding line Aa

Bonding line Ab

Bonding line BA

**DRCCOS**  
SITE <http://drccos.com>  
MAIL [info@drccos.com](mailto:info@drccos.com)  
Twitter <https://twitter.com/drccos.com>  
facebook <https://www.facebook.com/drccos.com/>

Bonding line BA

Bonding line Ba

Bonding line Bb

Bonding line BB

**DRCOS**

SITE <http://drcos.com>


MAIL [info@drcos.com](mailto:info@drcos.com)

Twitter [@drcos\\_com](https://twitter.com/drcos_com)

facebook <https://www.facebook.com/drcoscom>

**DRCOS**  
SITE <http://dr-cos.com>  
MAIL [info@dr-cos.com](mailto:info@dr-cos.com)  
Twitter <https://twitter.com/dr-cos>  
facebook <https://www.facebook.com/dr-cos.com/>

Bonding line Ab

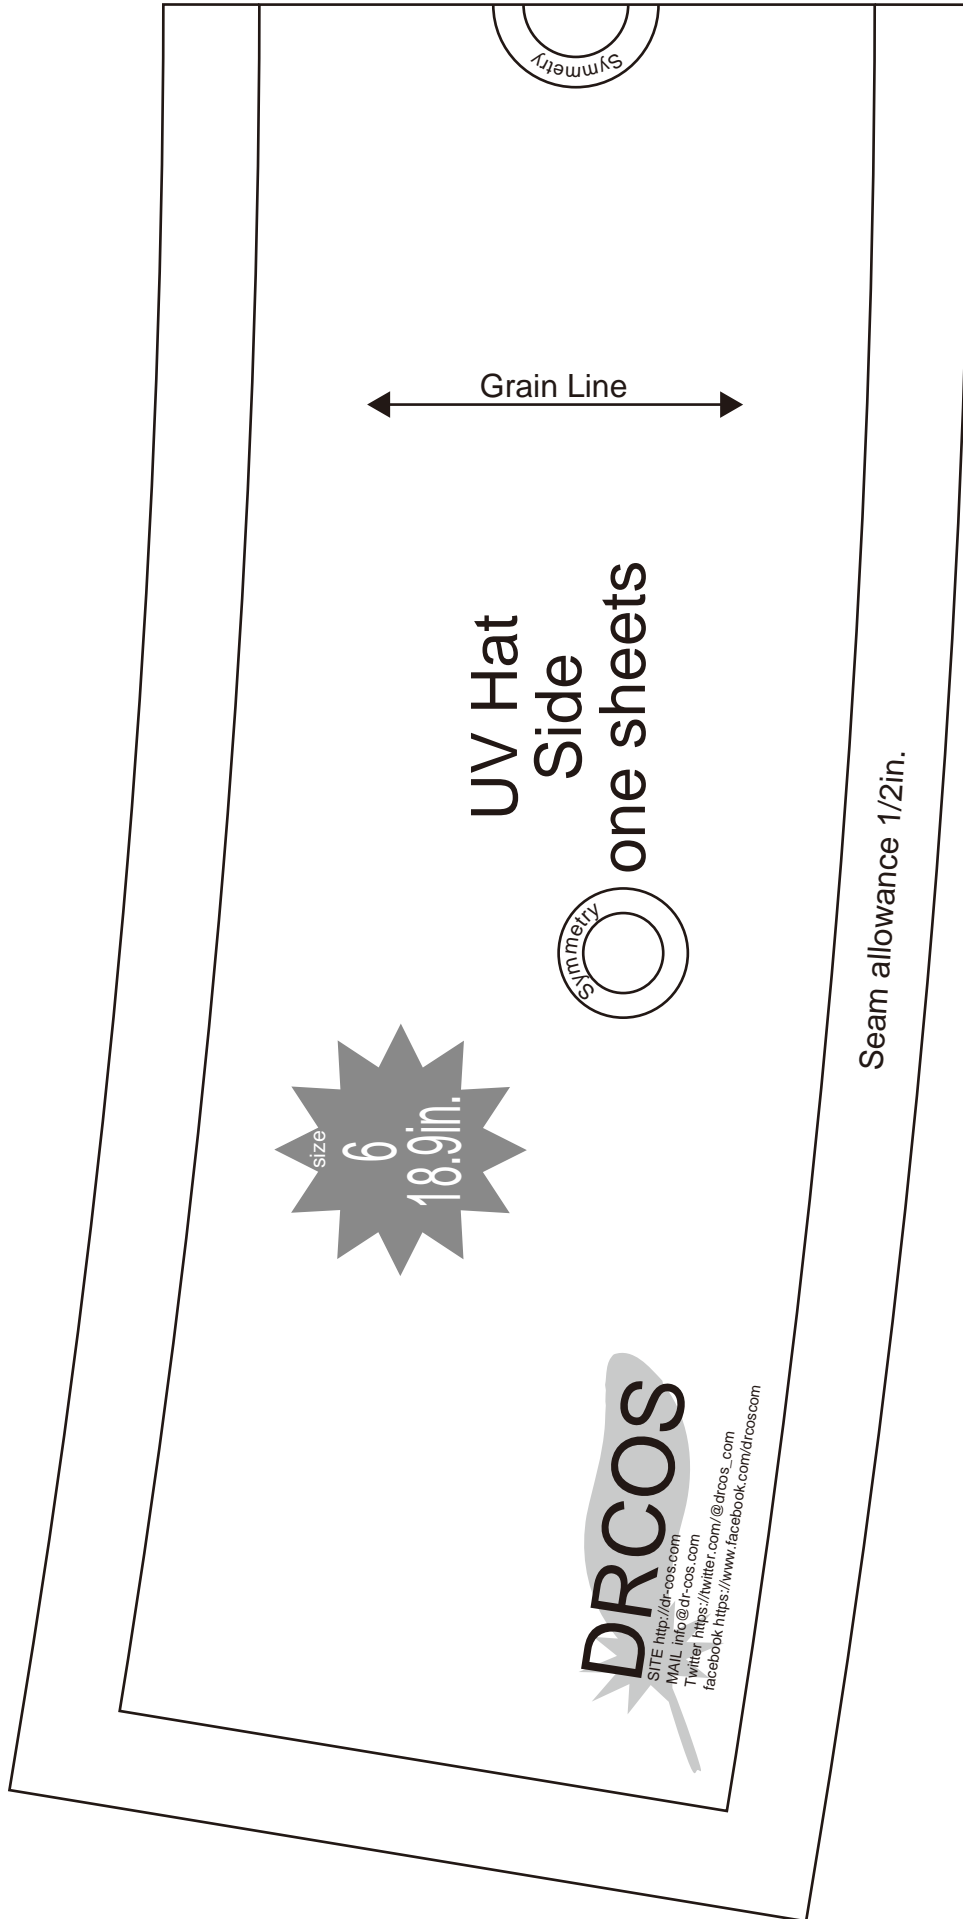

Bonding line Ac

Bonding line CA

Bonding line Bb

**DRCS**

SITE <http://dr-cos.com>

MAIL [info@dr-cos.com](mailto:info@dr-cos.com)

Twitter [@drccs\\_com](https://twitter.com/@drccs_com)

facebook <https://www.facebook.com/drccscom>



**UV Hat  
Brim  
two sheets**



Bonding line Bc

Bonding line CB

Bonding line DA

Bonding line Bc

How to make

Sorry if I haven't made myself understood (well) in English. You know I'm poor at English.

- 1. iron on the interfacing (heavy weight) to "Brim"
  - 2. "side" is sewn up and loop
  - 3. "top" and "side" sew pieces
  - 4. "brim" is sewn up and loop
- The surface and the back are same.
- 5. two "brims" are sewn up
  - 6. "side" "brim" is sewn up.

Seam allowance 1/2in.

Grain Line

Symmetry

Bonding line DB

Bonding line Bd