

Home

[Back to westernhat2 page](#)

allowance 1/2 in.

Grain Line

Bonding line Aa

**DRCO**

SITE <http://www.dr-cos.info/>  
MAIL [info@dr-cos.com](mailto:info@dr-cos.com)  
Twitter <https://twitter.com/dr-cos>  
facebook <https://www.facebook.com/dr-cos>

**DRCOS**

SITE <http://www.dr-cos.info/>  
MAIL [info@dr-cos.com](mailto:info@dr-cos.com)  
Twitter <https://twitter.com/dr-cos>  
facebook <https://www.facebook.com/dr-cos.com>

grommet



Westernh  
top  
interfacing(heavy  
one she



Bonding line AA


size  
7 3/4  
24.3in.

Bonding line AA

size  
7 3/4  
24.3in.

Western  
brim  
interfacing(hea  
two she

Bonding line

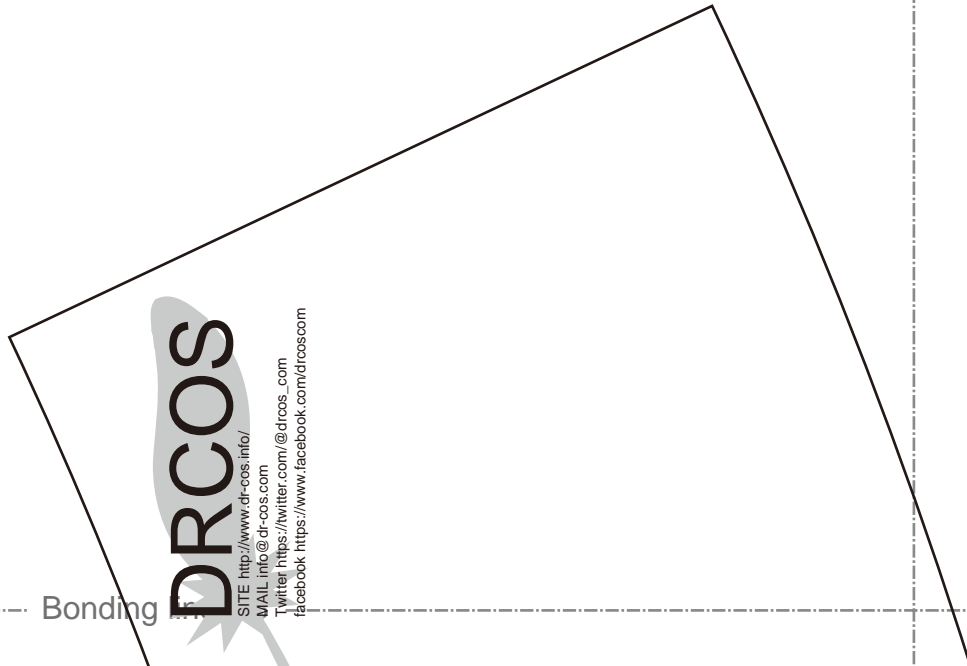

Bonding

**DRCOS**

SITE <http://www.drcos.info/>

MAIL [info@drcos.com](mailto:info@drcos.com)


Twitter [@drcos\\_com](https://twitter.com/@drcos_com)

facebook <https://www.facebook.com/drcoscom>

size  
**7 3/4**  
**24.3in.**

**DRCOS**

SITE <http://www.dr-cos.info/>  
MAIL [info@dr-cos.com](mailto:info@dr-cos.com)  
Twitter [https://twitter.com/@drcos\\_com](https://twitter.com/@drcos_com)  
facebook <https://www.facebook.com/drcoscom>

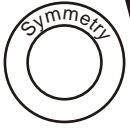


**Westernhat 2**  
**Top**  
**two sheets**



Seam allowance 1/2in.



**Westernhat 2**  
**side**  
**interfacing(heavy weight)**  
**one sheets**



size  
**7 3/4**  
**24.3in.**

Seam allowance

Grain Line

Westernhat 2  
brim  
four sheets

pleat & willie



DRCOS

dr-cos.info/  
os.com  
itter.com/@drcos\_com  
www.facebook.com/drcoscom

ernhat 2  
op  
(heavy weight)  
sheets

DRCOS

SITE <http://www.dr-cos.info/>  
MAIL [info@dr-cos.com](mailto:info@dr-cos.com)  
Twitter [https://twitter.com/@drcos\\_com](https://twitter.com/@drcos_com)  
facebook <https://www.facebook.com/drcoscom>

Bonding line BA

Bonding line Ab

Bonding line BA

size  
7 3/4  
24.3in.

ternhat 2  
brim  
(heavy weight)  
sheets

Bonding line Bb

Bonding line Bb

size  
7 3/4  
24.3in.

"brim" bonding line BB

**DRCOS**  
MAIL [info@dr-cos.com](mailto:info@dr-cos.com)  
Twitter [https://twitter.com/@drcos\\_com](https://twitter.com/@drcos_com)  
facebook <https://www.facebook.com/drcoscom>  
SITE <http://www.dr-cos.it/>

size  
**7 3/4**  
**24.3in.**

Bonding line Ca

Bonding line BC

Bonding line BB

Bonding line Cb

**How to make**

Sorry if I haven't made myself understood (well) in English. You know I'm poor at English.

1. iron on the interfacing (heavy weight) to "top" side "brim"
  2. "side" is sewn up and loop
  3. "top" and "side" are sewn up and loop
  4. "brim" is sewn up by a dotted line.
- The surface and the back are sewn up by a dotted line.
5. two "brims" are sewn up.
  6. In a "brim", bias (A wire is put in).
  7. "side" "brim" is sewn up.
  8. grommet is installed in the grommet location.
  9. to pass a string through a hole.

Seam allowance 1/2in.

**Westernhat 2**  
**side**  
**two sheets**

